

WORKBENCH CASTER Spring Lock Mounting Plate

4611

Version 1.0



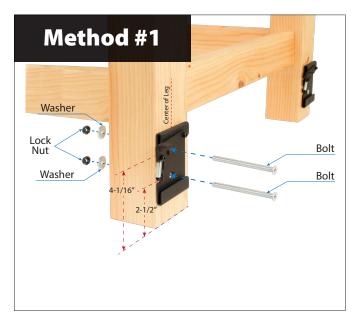

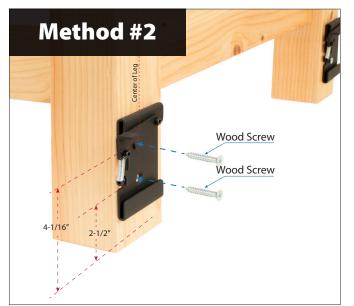

Mounting Method #1

Mount with bolts

- 1. Measure 2½" from the base of your workbench leg and make a mark on the center of the leg.
- 2. Place the plate onto the leg and align the bottom hole of the plate with the mark.
- 3. Make sure the plate is straight and mark the top side hole (4-1/16" from the base of the leg) on to the leg. Remove the plate.
- 4. Drill a 1/4" hole through the workbench leg at the two marked locations.
- 5. Place the plate over the two holes and secure the plate with bolts, washers and lock nuts as shown in **Method #1** Illustration.

Mounting Method #2

Mount with wood screws

- 1. Measure 2½" from the base of your workbench leg and make a mark on the center of the leg.
- 2. Place the plate onto the leg and align the bottom hole of the plate with the mark.
- 3. Make sure the plate is straight and mark the top side hole (4-1/16" from the base of the leg) on to the leg. Remove the plate.
- 4. Drill a 3/16" pilot hole at the two marked locations. Only drill into the leg about 1" deep. Do not drill all the way through.
- 5. Place the plate over the two holes and secure the plate with the wood screws as shown in **Method #2** Illustration.



When drilling your holes, be sure to keep the drill at 90 degrees to the leg.

Assemble the Caster

- 1. Raise the foot pedal to the upward position
- 2. Insert the caster wheel threaded stud through hole on the caster plate
- 3. Place the lock washer on to the threaded stud of the caster.
- 4. Thread the nut on to the threaded stud of the caster
- 5. Secure the nut tightly with a wrench or ratcheting socket.





To Mount The Caster

Slide the caster assembly into the open side of the caster plate until it clicks into place up against the retainer tab.



To Remove the Caster

If you need to remove the caster, disengage the caster, then raise the Spring Lock Lever and slide the caster out.



Repeat Process for All 4 Legs

Once completed with the first leg, repeat this process for the remaining legs on your workbench. Once all the casters are set and in place, you can engage each caster and move your workbench around as needed.

Workbench casters aren't just for workbenches...

The workbench casters can be mounted to many different machines, cabinets or tables. All you need to do is to make sure the surface your attaching the casters to is flat and stable enough for mounting the caster assembly.



CAUTION When using your workbench machinery, stands or shop cabinets, make sure the casters are dis-engaged and the machine, stand or cabinet is sitting flat on the floor.

