POWER GRIP V-STYLE PUSH STICK Instructions

11561 Version 1.0



Safety First



Disconnect machine from power source before making any adjustments.



Always wear proper ear protection when working with machinery.



Use caution when handling sharp objects (saw blades, router bits, drill bits and so on). Use protective gloves whenever possible.




Always wear proper eye protection when working with machinery and tools.



Always wear proper respiratory protection when working near airborne dust particles. Please read and fully understand any and all safety materials that came with your power tools or machinery before operation. Always follow all safety guidelines set in place by the power tool or machine manufacturer.

Deluxe Push Stick

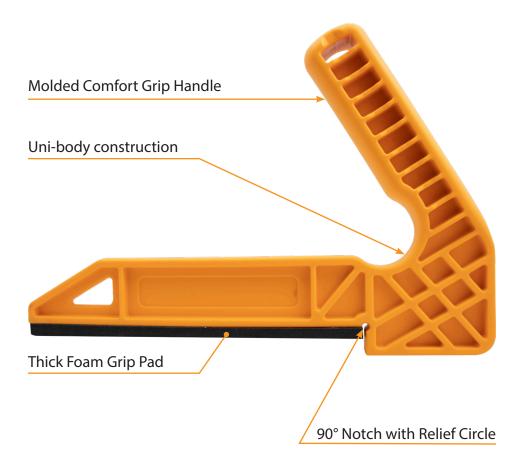

Hook the Back End of Your Stock



This push stick has a 90 degree notch with a relief circle cut out. This helps "hook" the back end of your stock much better than standard styles of push sticks.



Guards have been removed from images for clarity purposes

Receptive Foam Pad for More Control



Also featured on these push sticks is the foam lined base. This helps provide you with even more control while feeding the stock through the blade. It also prevents slipping which can sometimes occur with standard style push sticks.



Use with a Featherboard




When used with a featherboard, the push stick becomes even more useful. The sideways pressure from the featherboard, along with the push stick from behind the stock provides the user with a safer more efficient way to cut narrow stock on a table saw.



Always keep fingers a safe distance away from cutters and blades when operating machinery

Guards have been removed from images for clarity purposes

Keep the Push Foam Pad Clean

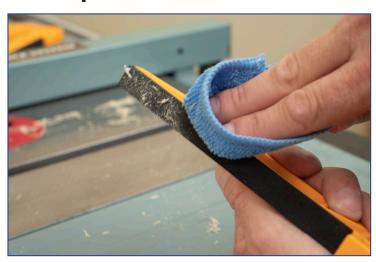

Before each use, inspect the foam pad on the bottom of the push stick. Make sure it is clean and debris free. We recommend using warm water on a cotton or micro-fiber cloth to wipe the pad clean. Make sure pad is completely dry before using.

