

Retractable Casters

Assembly and Basic Use

Version 1.0

Safety First



Disconnect saw from power source before fitting or removing insert.



Always wear proper ear protection when working with machinery.



Use caution when handling sharp objects (saw blades, router bits, drill bits and so on). Use protective gloves whenever possible.



Always wear proper eye protection when working with machinery and tools.



Always wear proper respiratory protection when working near airborne dust particles.

Please read and fully understand any and all safety materials that came with your power tools or machinery before operation. Always follow all safety guidelines set in place by the power tool or machine manufacturer.

Attach Assembly to Saw or Stand

- The Retractable Casters are designed to be used on open, angled, metal stands like those found on many brands of contractor style table saws. Make sure that the stand you are attaching the Retractable Casters too, is sitting flat on the floor surface before proceeding.



- (1) Retract one of the Caster Assemblies. Place that Assembly on to the outside of one of the legs on your stand. Make sure the wheel is touching the ground.
- (2) While holding the Assembly in position, rotate the caster (wheel) to the inward position (toward the leg) and move the Assembly upwards on the leg until the wheel is just barely off the ground surface.



- (2) With the Assembly and the caster just barely off the ground, securely clamp the Assembly to the leg.
- (3) Using each of the four holes on the Assembly as a guide, line them up with the holes on the stand. If the 4 holes do not match up, then you must drill new holes into your stand. The new holes must be able to accept the 5/16" mounting bolts that are supplied with the Retractable Casters.



Note: You may need to slightly loosen the clamp to re-position the Assembly



- (4) Once the holes are lined up re-secure the Assembly with a clamp (if necessary) and attach it using the supplied hardware. Remove the clamp once hardware is secured.
- Repeat this process on all four legs on your stand.

How to Engage and Disengage

To Engage (raise the saw)

Push down on the upper lock bracket (1) until it locks in place (2)

WARNING!




DO NOT OPERATE WITH HANDS



To Disengage (lower the saw)

1. With your foot positioned over both the lower release bracket and upper lock bracket (1), push down to dis-engage the lower lock bracket keeping your foot positioned over the upper lock bracket (2). By slowly raising your foot while on the upper bracket lever the saw leg will be lowered to the ground (3).

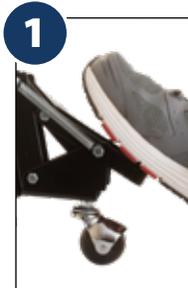

CAUTION



Do NOT operate table saw while casters are engaged as this may cause serious injury. Each Retractable Caster assembly has multiple pinch points that can cause serious injury. Do NOT use your hand or fingers to operate the casters at any time. Always use your foot with the proper footwear. Failure to do so may result in serious bodily harm.