

Miter Bar **SCREW NUBS** MUST be at a **90°** angle to the cut slots on the expanding miter bar in order to spread the expanding miter bar outward.

