

Square Wrap Around Sander


1

Remove the locking insert by slightly bending the tool until the insert pops out.



2


Cut a piece of sandpaper that is approximately 1-9/16" wide by 2-5/8" long. Fold and tuck one side into the sander opening as shown here.

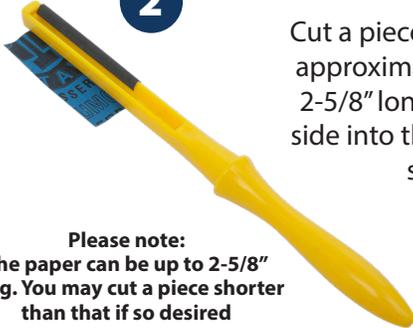

Please note:
The paper can be up to 2-5/8" long. You may cut a piece shorter than that if so desired

3

Fold and tuck the other side into the sander opening as shown here. While holding the sandpaper in place, snap the locking insert back into the opening. This will lock the sandpaper firmly in place.

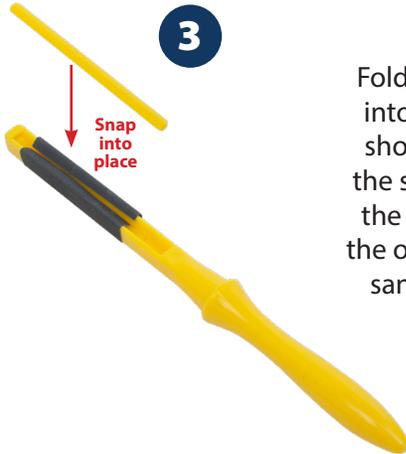

You are now ready to use the square wrap around sander!

Please note:
This sander is designed to be used with 150 grit or finer. Coarse grits will not fit properly on this sander.

Round Wrap Around Sander


1

Remove the locking insert by slightly bending the tool until the insert pops out.



2


Cut a piece of sandpaper that is approximately 1-1/4" wide by 2-5/8" long. Fold and tuck one side into the sander opening as shown here.

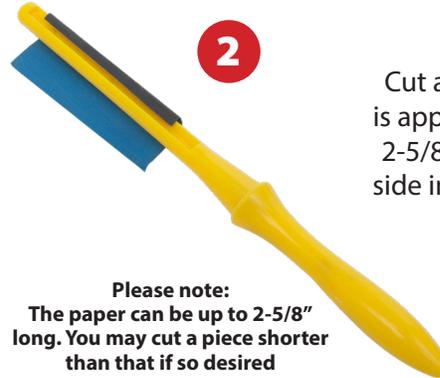

Please note:
The paper can be up to 2-5/8" long. You may cut a piece shorter than that if so desired

3

Fold and tuck the other side into the sander opening as shown here. While holding the sandpaper in place, snap the locking insert back into the opening. This will lock the sandpaper firmly in place.

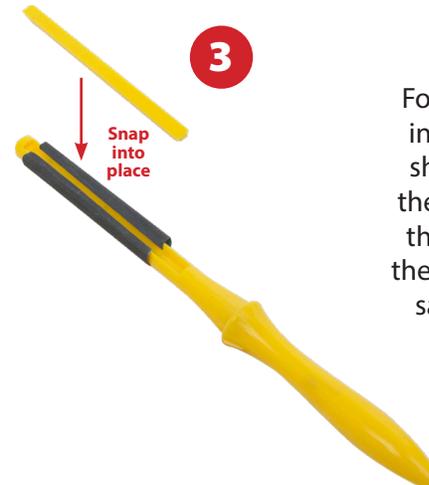


You are now ready to use the round wrap around sander!

Please note:
This sander is designed to be used with 150 grit or finer. Coarse grits will not fit properly on this sander.

Small Flat File Sander

1


The locking slide is removed by sliding it off as shown here. You may need to use a little extra upward pressure if you have sandpaper on the file sander.

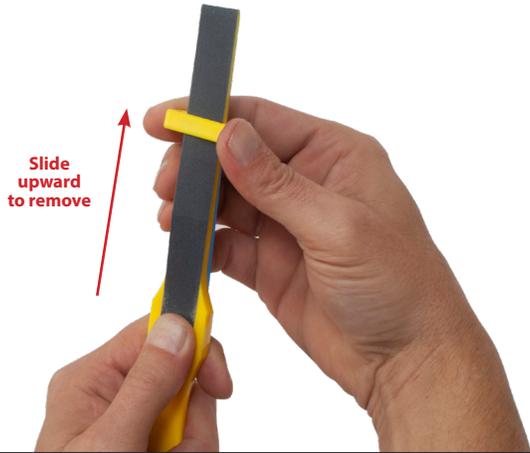

Large Flat File Sander


1

The locking slides are removed by sliding it off as shown here. You may need to use a little extra pressure if you have sandpaper on the file sander.

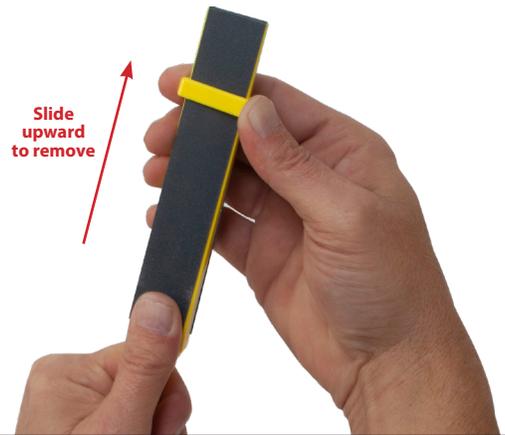

2

Cut a piece of sandpaper that is approximately 5/8" wide by 11" long. Fold the strip in half and place it over the top of the sanding file as shown here. Start sliding the sliding lock downward

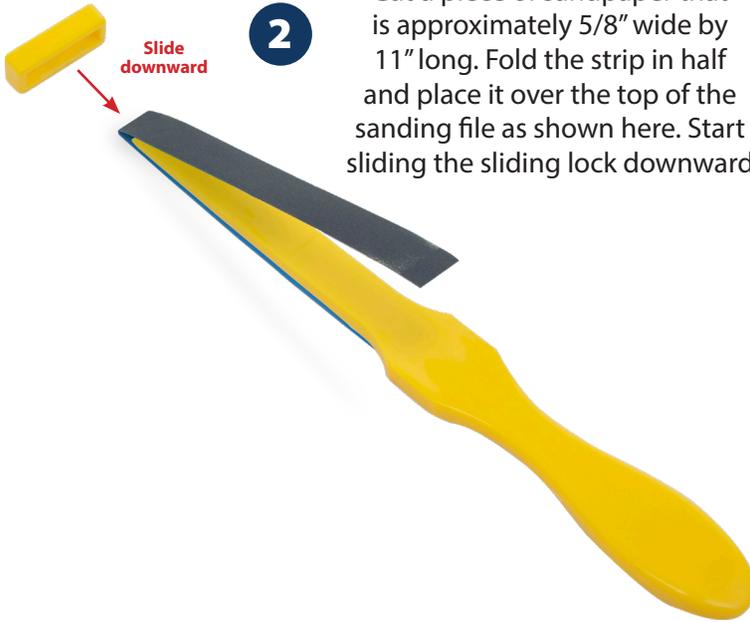

2

Cut a piece of sandpaper that is approximately 1" wide by 11" long. Fold the strip in half and place it over the top of the sanding file as shown here. Start sliding the sliding lock downward



3

Continue sliding the lock over the sandpaper strip on the file until it firmly grips the sandpaper and holds it in place as shown here. You are now ready to use the flat sanding file!



3

Continue sliding the lock over the sandpaper strip on the file until it firmly grips the sandpaper and holds it in place as shown here. You are now ready to use the flat sanding file!



*Please note:
This sander is designed to be used with
150 grit or finer. Coarse grits will not
fit properly on this sander.*

*Please note:
This sander is designed to be used with
150 grit or finer. Coarse grits will not
fit properly on this sander.*