


Sheriff Inlay Kit Instructions

Kit components

- 1: 1 x Black Stabilized Barrel with laser cutout (Barrel has tree pieces)
- 2: 1 x Yellow Stabilized Wood Sheriff Badge Inlay
- 3: 1 x Light Brown Glock Pistol inlay piece
- 4: 1 x White Stabilized Holly Handcuff inlay piece.
- 5: 1 x 3 x Small Black inlay pieces for the trigger guard (Only one is needed)

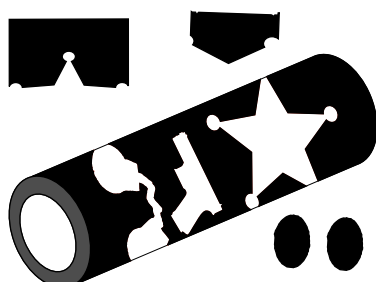

Barrel with laser cutout and pieces



Sheriff inlay piece



Handcuff laser Inlay



Glock laser Inlay



Small black inlay pieces

Step 1:

Remove all components from the plastic bag and place on a clean work surface. Please note that the components are small and you can lose them quite easily. The parts are also fragile and should be handled with care. Do not touch anything away until the kit is completely assembled.

Step 2:

Take the barrel with the laser cutout and slide the brass tube(27/64) into it. **Please do not use any glue** at this stage, this is only to assist you with the assembly process.

Step 3:

Take the black barrel and remove the two pieces around the sheriff badge. The loose piece between the Sheriff badge and the Glock may have fallen out already. Take the top black piece that is attached to the Sheriff badge and break it in two pieces. (see [Illustration 1](#)) Take the Handcuffs and break them into three pieces. The pieces are very fragile so please be careful when breaking it apart.


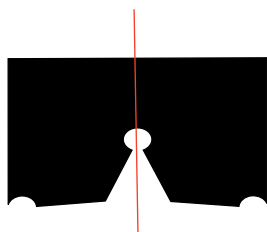


Illustration Nr 1

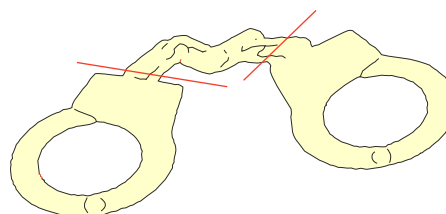

Break the laser cutout on the red lines.


Step 4:

Place all of the small inlay pieces into their corresponding openings. Some of these pieces are very tiny, **DO NOT RUSH and LOOSE THEM!**

Assemble the pieces in the following order:

- 1: Insert the Glock pistol.
- 2: Insert the Sheriff Badge
- 3: Insert the piece between the Badge and the Glock pistol.
- 4: Insert the Handcuffs.
- 5: Insert the small black piece into the trigger guard.

*Some pieces might be more difficult to fit and you can dip the piece in warm water before placing it.
Never force anything into place.*

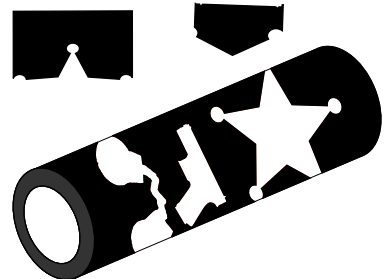

Barrel with laser cutout and pieces

Once all the parts are in place you can use a small piece of wood/penblank to push it completely into position.

Step 5:

After all the inlay pieces are in place **REMOVE THE BRASS TUBE** from the barrel and then use small amounts of thin CA glue to secure all the pieces into place. Please **do not** soak the whole inlay with thin CA, try to keep the glue to the outer edges of each inlay piece and not in the laser detail lines which will be filled with black dust while turning and finishing the pen.

Step 6:

Cut the barrel to length but **do not use a Barrel trimmer** it will destroy/break the barrel and all your hard work. Use a disk sander or any other method that will not destroy your blank. Now you can glue the brass tube into place with a glue of your choice and let it dry completely before turning the blank.

It is important to sand the barrel smooth before you are going to use a skew or any other turning tools.

After the barrel is sanded smooth blow the sanding dust out of the laser detail lines and rub some black/dark wood dust into those detail lines. Use thin CA glue over the whole inlay to secure all pieces into place before turning the barrel to size.

While turning the barrel to size you will notice that some of the laser detail lines will need some more dust filling just repeat filling it with dust and cover with thin CA and continue turning.

Good luck and if you have any questions please do not hesitate to contact me by email or phone. info@lazerlinez.com Tel: 770 891 2301