


Miter Saw Extension Kit

The Miter Saw Extension Kit can be mounted to the fence face of all popular Miter / Chop Saws with the mounting T-Slot up as shown in Figure 1 and Detail 1 or with the mounting T-Slot down as shown in Figure 2 and Detail 2.

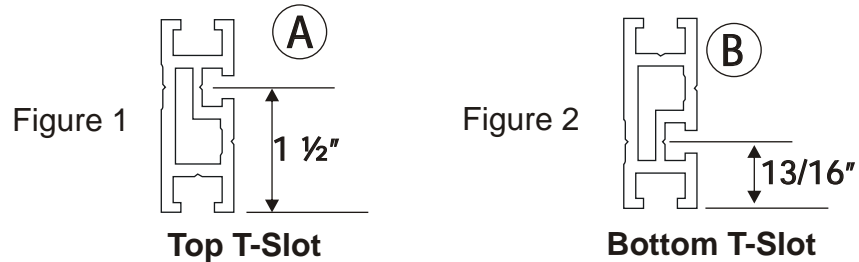

Mounting Instructions

1. Determine the proper drilling locations as shown in Detail 1 and Detail 2 depending on the height and spacing of your Saw Fence (T-Slot up or T-Slot down).
 2. Measure and place a mark 2" and 6" from the outside edge of both fence sections 1 1/2" up from the miter saw table top for mounting the fence with the mounting T-Slot up or 13/16" up from the miter saw table for the mounting T-Slot down.
- Note: Insure there are no casting ribs or other obstructions on the back of the fence at these locations, if so adjust left or right so that there will be a flat spot for the locking knob to tighten against the fence back.*
3. Drill a 1/4" hole through the saw fence on each mark.
 4. Insert a 1/4" bolt through the fence at each hole with the bolt hex head facing out. Install a locking knob on each bolt from the back side of the fence. Tighten the locking knob leaving approx. 1/4" of bolt thread showing to the front of the fence.
 5. Slide the Miter-T-Fence sections mounting T-Slot over the 1/4" hex heads of the bolts until the fence is positioned properly then tighten locking knobs to secure the Miter-T-Fence

!!! Warning. !!!

Check to insure that the Miter Saw Blade will not contact either the left or right Miter-T-Fence sections or the steel extender bar before operating the saw.

